



OTEXIO

USE AND MAINTENANCE MANUAL

Creation date : 04/22/24

Author : Remy Martin

Version : V.1



1 table of contents

1 table of contents 2

2 HANDLING THE NET : 3

2.1 Step 1 : Remove the cables from the claw clamps..... 3

2.2 Step 2 : Remove the stainless steel rod from the claw located on the width where the net will be detached (opening side : 4

2.3 Step 3 : Detach the carabiners attached to the net from those attached to the rings :4

2.4 Step 4 : Net folding : 5

2.5 Step 5 : Repositioning the cables in the recovery claws :..... 6

3 INTERMEDIATE RECOVERY OF THE NET FOR PARTIAL FOLDING OF THE NET (Option depending on the typology of the pit) :..... 7

3.1 Option 1 : You want to fold the net over part of the pit uniquely : 7

3.2 Option 2 : You wish to fold the net over the entire pit : 7

4 SYSTEM MAINTENANCE TIPS :..... 8


4.1 Case of a person falling on the net : 8

4.2 Case of an object falling on the net : 8

4.3 System Maintenance : 8

2 HANDLING THE NET :

2.1 Step 1 : Remove the cables from the claw clamps

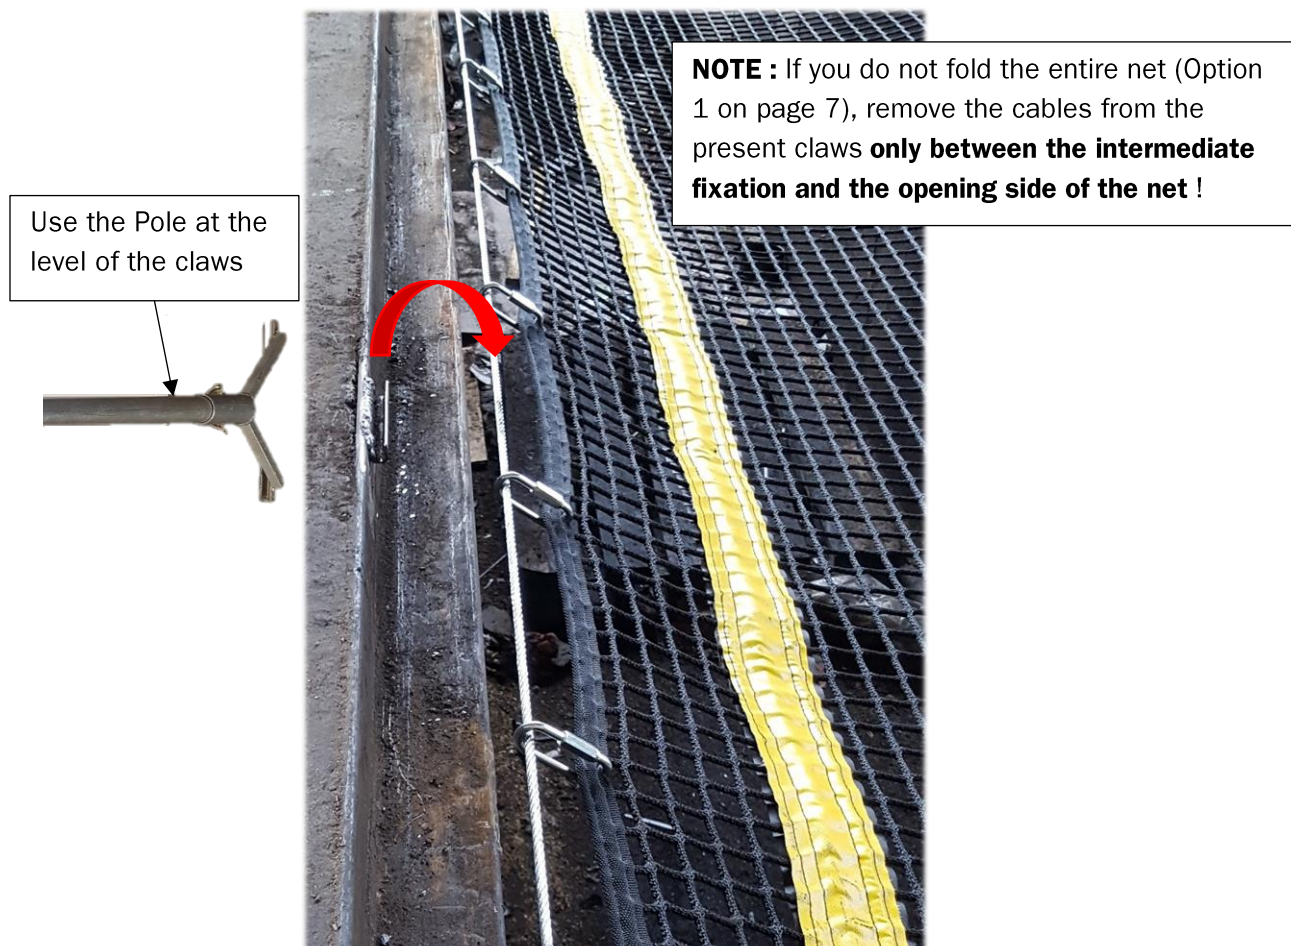

- 2.2 Step 2 : Remove the stainless steel rod from the claw located on the width where the net will be detached (opening side :



- 2.3 Step 3 : Detach the carabiners attached to the net from those attached to the rings :



2.4 Step 4 : Net folding :


➔ Enter the pit then push the net :



Result :



2.5 Step 5 : Repositioning the cables in the recovery claws :

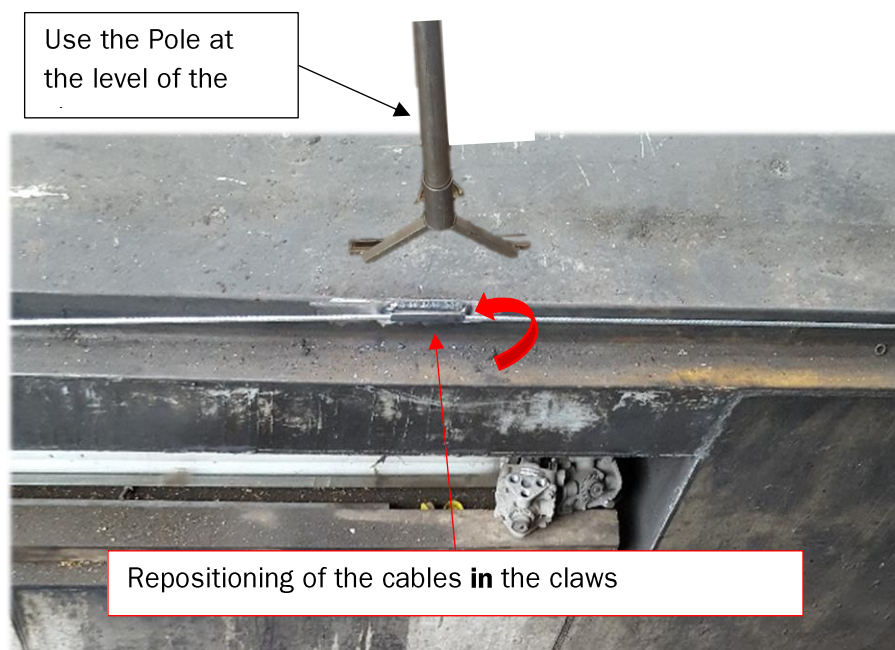

Result :



Noticed : To unfold the net and secure the pit, perform the steps above in reverse order. The carabiners must be fixed to each other in the corners, and the cables must be in all the catches.

3 INTERMEDIATE RECOVERY OF THE NET FOR PARTIAL FOLDING OF THE NET (Option depending on the typology of the pit) :

The **Pierced Plates** and **D8 asymmetrical carabiners** allow the net to be blocked at an intermediate position in the pit. So you can work in one part of the pit while leaving the other part secure.

3.1 Option 1 : You want to fold the net over part of the pit uniquely :

- ➔ Connect screw links (attached to the net) to the asymmetrical D8 carabiners attached to the drilled plates:



After pushing the net you obtain the following configuration :



3.2 Option 2 : You wish to fold the net over the entire pit :

- ➔ -> Leave the screw links detached from the asymmetrical carabiners.

4 SYSTEM MAINTENANCE TIPS :

4.1 Case of a person falling on the net :

The PROTECPIT® system being a safety device, here are the instructions that must be followed after a person falls on the net :

- 1) Replace the entire net with a new net.
- 2) Replace all screw links connecting the net to the cables.
- 3) Replace other metal parts that are deformed.
- 4) Replace the cables with new cables.

We advise you to take photos of all the metal elements and send them to OTEXIO (see contact details below) in order to obtain a precise diagnosis.

ATTENTION : A PROTECPIT® system is not guaranteed to accommodate two successive falls of people. It is therefore mandatory to respect the instructions above in order to guarantee the safety of operators.

4.2 Case of an object falling on the net :

In order not to weaken a PROTECPIT® system following the fall of a heavy object on the net, we recommend following the same instructions as those for the fall of a person. This will prevent the system from being degraded before a person falls on the net.

4.3 System Maintenance :

At least once a year it is recommended to carry out the following operations to ensure proper functioning of the system :

- 1) Check that all screw links are tight.
- 2) Check that there are no tears in the net.
- 3) Check that all the D8 asymmetrical carabiners take up the net at the corners of the pit.
- 4) Check that the cables have not suffered abnormal wear
- 5) Check that the cable recovery claws have not suffered abnormal wear

The net does not require an annual resistance check. However, check that it has not been damaged by a hot, abrasive element or a falling person/object. If in doubt, contact OTEXIO for a precise diagnosis.

**The PROTECPIT® system is a patented product. For any technical assistance, you can contact us by telephone at 04 78 05 21 27, or by mail at the address remy.martin@otexio.com*